Visite la página TRAXXAS.com/manuals para descargar el instructiones en su idioma.

Auf TRAXXAS.com/manuals können Sie anleitung in Ihrer Sprache downloaden.

Servo Rebuild Instructions

Covers Parts #2086, 2087, 2087X, 2087R

1. O-ring
2. PTFE washer
3. Upper bearing
4. Top reduction gear
5. Output gear
6. Lower bearing
7. Center reduction gear
8. Bottom reduction gear
9. 18mm gear shaft
10. 12mm gear shaft
11. Servo case
12. Gasket
13. O-ring (1.20mm)
14. O-ring (1.50mm)

Note: Disassemble the servo saver assembly to inspect for any signs of damage. Ensure the servo saver is clean and moves freely.

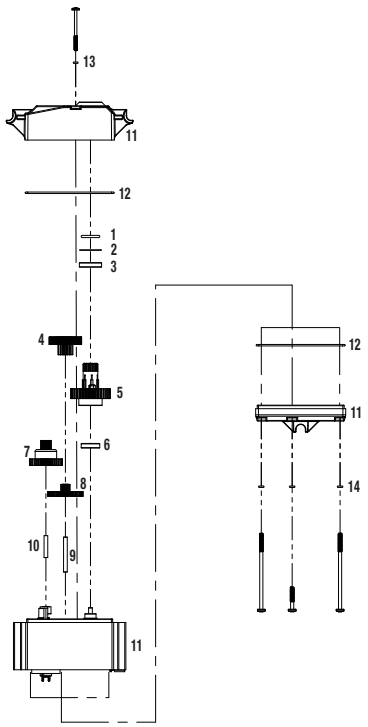

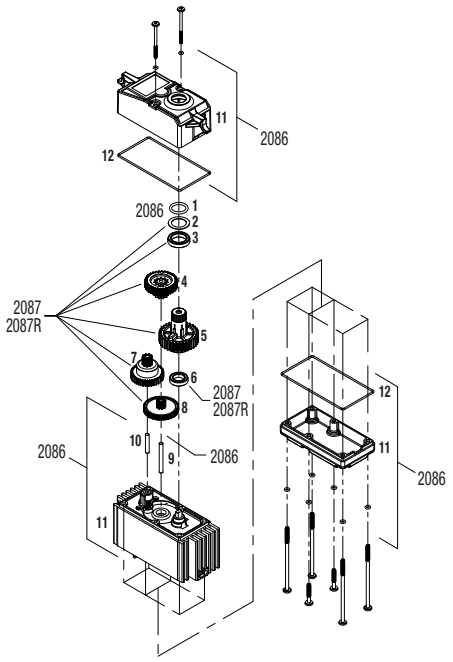

If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

Traxxas, 6250 Traxxas Way, McKinney, TX 75070, Phone: 972-549-3000, Fax: 972-549-3011, e-mail: support@Traxxas.com

KC2338-R02 Rev 230810

Visite la página TRAXXAS.com/manuals para descargar el instructiones en su idioma.

Auf TRAXXAS.com/manuals können Sie anleitung in Ihrer Sprache downloaden.

Servo Rebuild Instructions

Covers Parts #2086, 2087, 2087X, 2087R

1. O-ring
2. PTFE washer
3. Upper bearing
4. Top reduction gear
5. Output gear
6. Lower bearing
7. Center reduction gear
8. Bottom reduction gear
9. 18mm gear shaft
10. 12mm gear shaft
11. Servo case
12. Gasket
13. O-ring (1.20mm)
14. O-ring (1.50mm)

Note: Disassemble the servo saver assembly to inspect for any signs of damage. Ensure the servo saver is clean and moves freely.

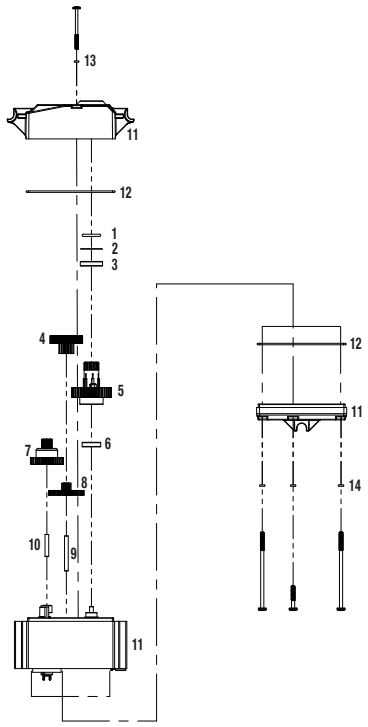

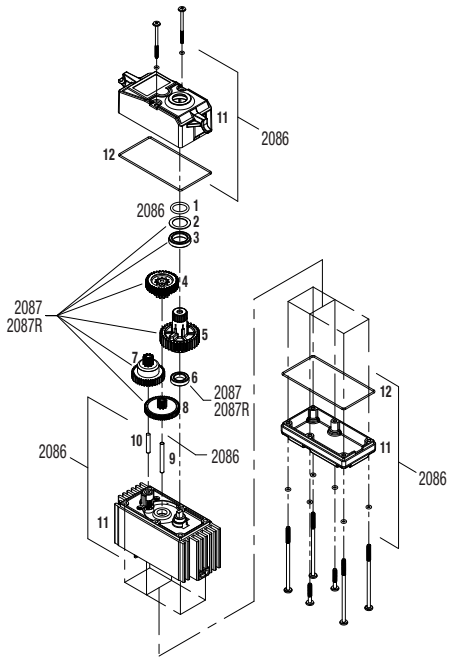

If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

TRAXXAS.com

Traxxas, 6250 Traxxas Way, McKinney, TX 75070, Phone: 972-549-3000, Fax: 972-549-3011, e-mail: support@Traxxas.com

KC2338-R02 Rev 230810