Visitez Traxxas.com/manuals pour télécharger les instructions dans votre langue.
Visite la página Traxxas.com/manuals para descargar el instrucciones en su idioma.
Auf Traxxas.com/manuals, können Sie anleitung in Ihrer Sprache downloaden.

Pro Scale Aluminum Wheels System Instructions

Covers Parts #10257, #10274, #10275, #10276

1

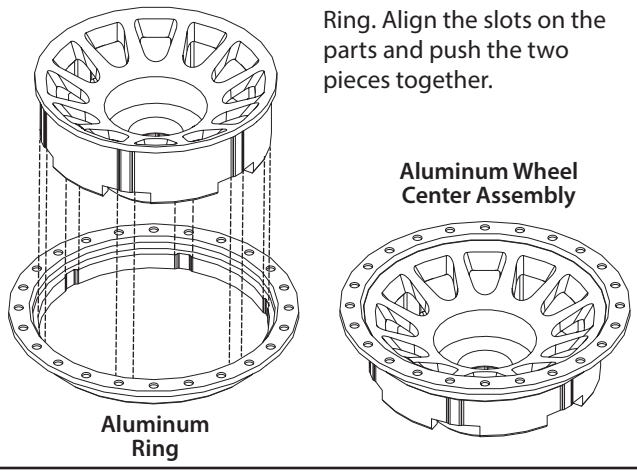

Place the Aluminum Wheel Center inside the Aluminum Ring. Align the slots on the parts and push the two pieces together.

2

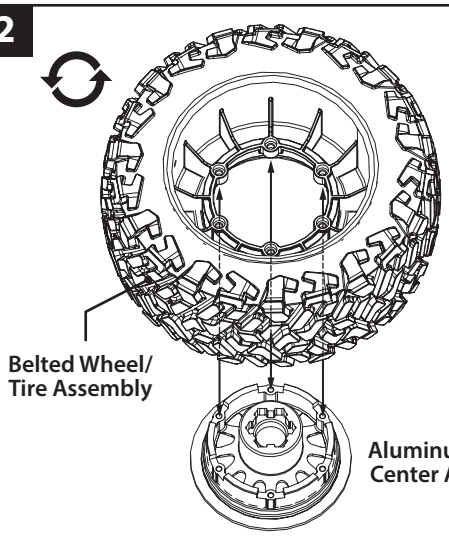

Turn the Belted Wheel/Tire Assembly over and align the screw bosses on the inside of the wheel with the insets on the Aluminum Wheel Center Assembly.

Push the parts together until the wheel center is fully seated against the wheel.

3

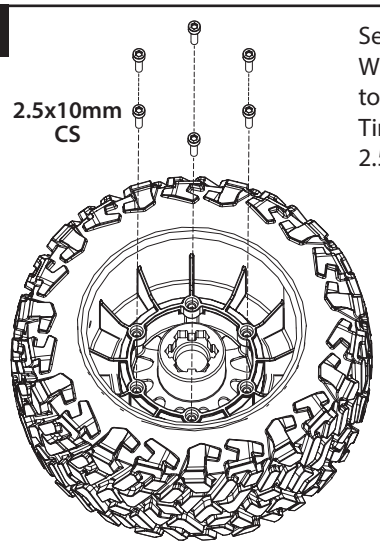

Secure the Aluminum Wheel Center Assembly to the Belted Wheel/ Tire Assembly using the 2.5x10mm CS (6).

4

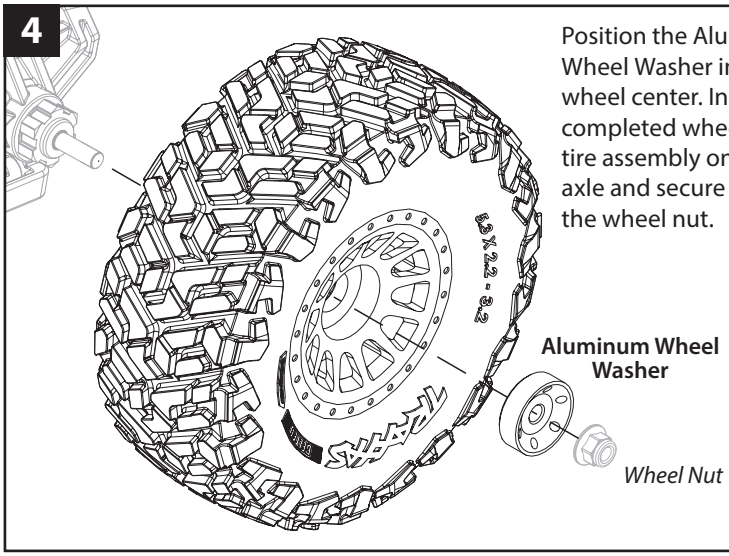

Position the Aluminum Wheel Washer in the wheel center. Install the completed wheel and tire assembly on the axle and secure with the wheel nut.

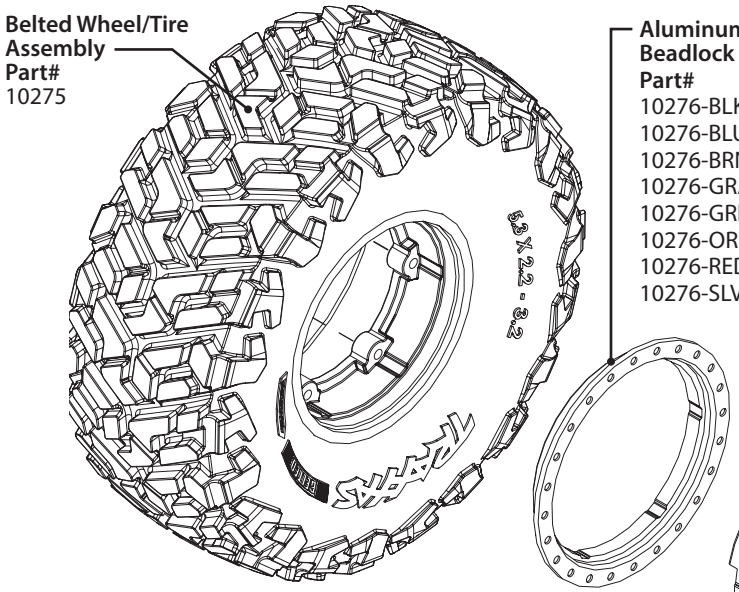

For a complete set of four wheel/tire assemblies:

Start with TWO packages of Part #10275 Belted Wheel/Tire Assembly

Choose TWO packages of Part #10274 Aluminum Wheel Centers

Choose ONE package of Part #10276 Aluminum Rings

Choose ONE package of Part #10257 Aluminum Wheel Washers*

**The above Part #10257 series washers are not compatible with the Unlimited Desert Racer; use Part #8549 Wheel Adapter.*

Traxxas, 6250 Traxxas Way, McKinney, TX 75070, Phone: 972-549-3000, Fax: 972-549-3011, e-mail: support@Traxxas.com

KC24047-R01 250303